 


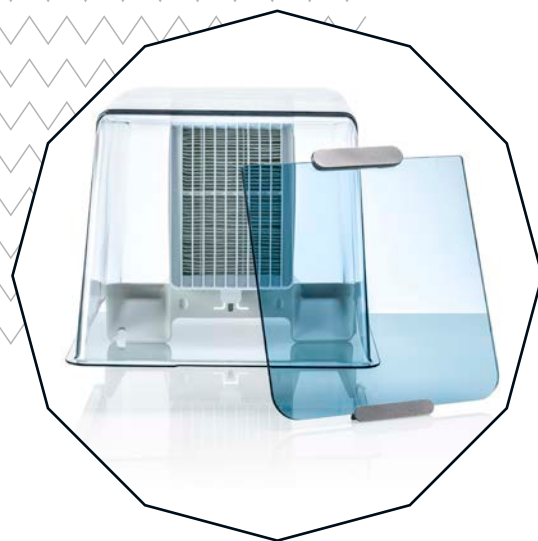

Ultimaker 2+ Connect Air Manager Spare parts catalog



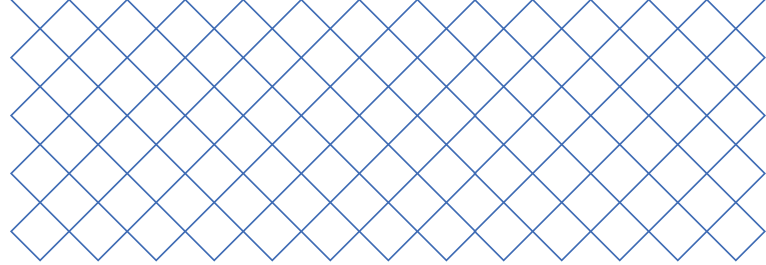


Table of contents

Ultimaker 2+ Connect Air Manager

Accessories and packaging	3
Spare parts	4

Accessories and packaging



218074 Air Manager filter

Air Manager filter


Consumable item. Boxed filter for the Air Manager



226761 UMB cable Air Manager

UMB cable L500 straight

UMB cable to connect the Air Manager to the Ultimaker 2+ Connect. Length 500 mm

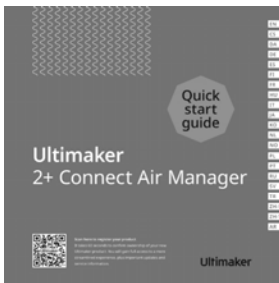

226765 Quick start guide

Quick start guide Ultimaker 2+ Connect Air Manager


Quick start guide booklet for the Ultimaker 2+ Connect Air Manager. Content available in 21 languages



226763 Outer box Air Manager

Outer box Ultimaker 2+ Connect Air Manager

The outer box for the Ultimaker 2+ Connect Air Manager

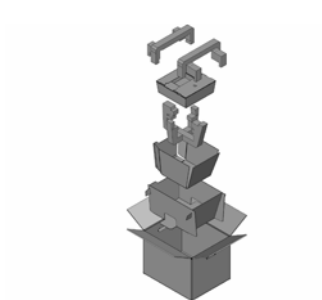


226746 Packaging assembly

Packaging assembly Ultimaker 2+ Connect Air Manager

Complete packaging assembly for the Ultimaker 2+ Connect Air Manager, including outer box, inner cardboard, and foam pieces


Spare parts

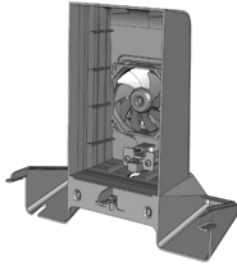

226744 Filter housing assembly

Filter housing Ultimaker 2+ Connect Air Manager

This part mounts onto the Ultimaker 2+ Connect and houses the filter. The fan and PCB are included

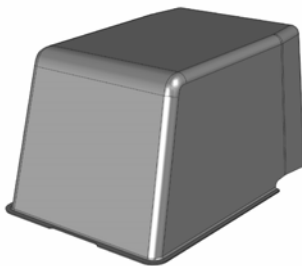

226753 Top cover

Top cover Ultimaker 2+ Connect Air Manager

Plastic top cover for the Ultimaker 2+ Connect Air Manager




226755 Front enclosure

Front enclosure Ultimaker 2+ Connect

Front enclosure assembly including handle with magnets and hinge profile


Note: Not intended to be used separately

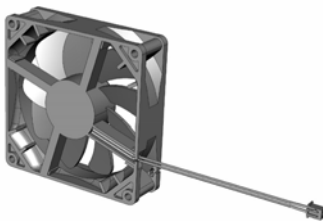

226757 Air Manager fan

Fan Ultimaker 2+ Connect Air Manager

24 V axial fan 92x92x25 for the Ultimaker 2+ Connect Air Manager

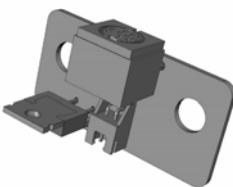

226759 Air Manager PCB

PCB Ultimaker 2+ Connect Air Manager

PCB with fan and UMB cable connector for the Ultimaker 2+ Connect Air Manager