
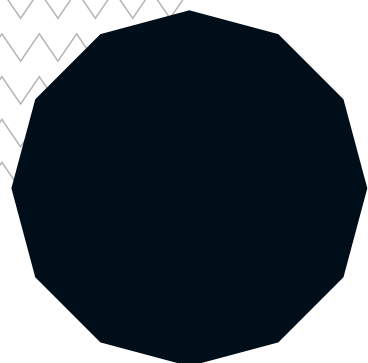


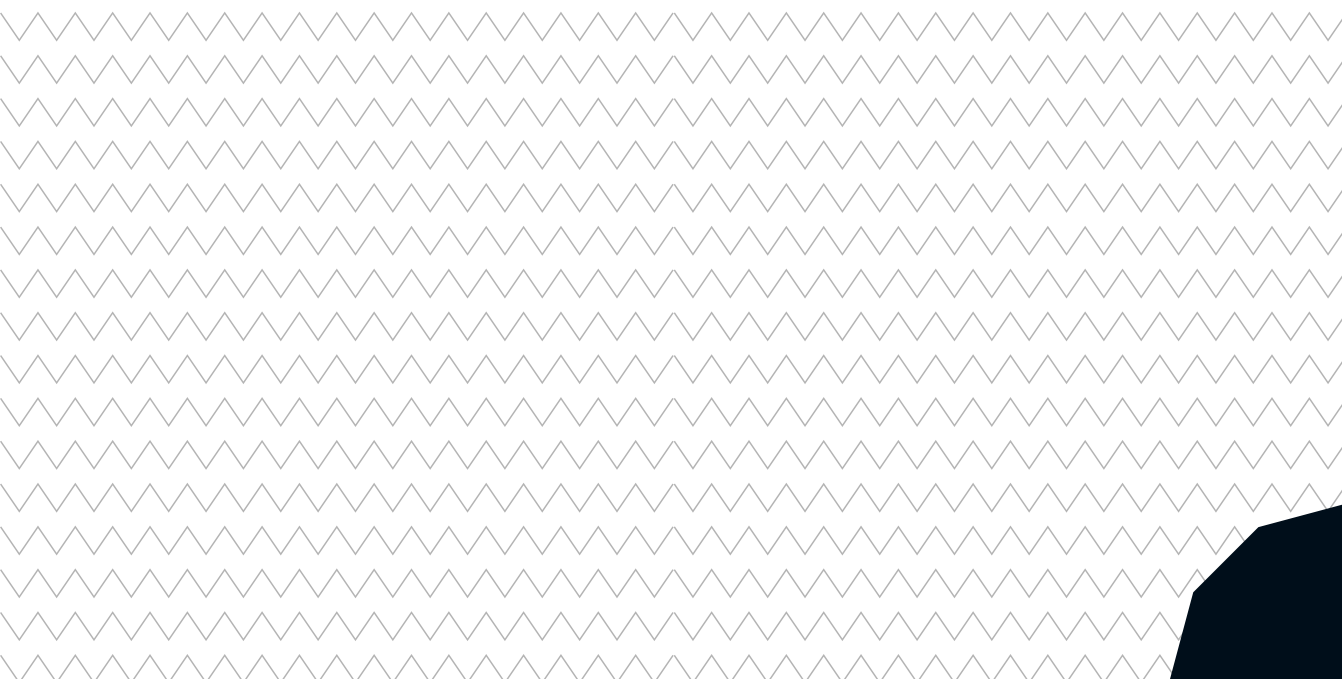

Air Manager

Spare parts catalogue




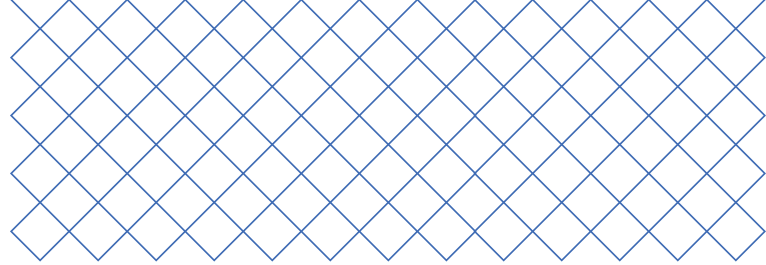


Table of contents

Main assemblies	3
General parts	4
Packaging	6


Main assemblies

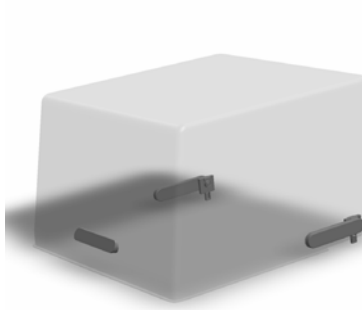


216094 - Cover assembly
S5 Transparant hood assembly




216103 - Filter housing assembly
Filter housing assembly

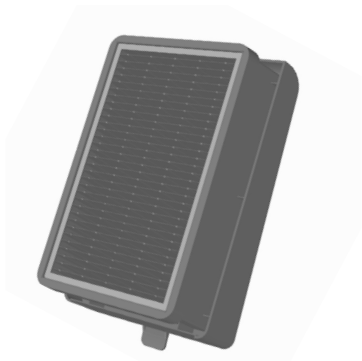

218074 - Boxed filter assembly
Boxed filter assembly

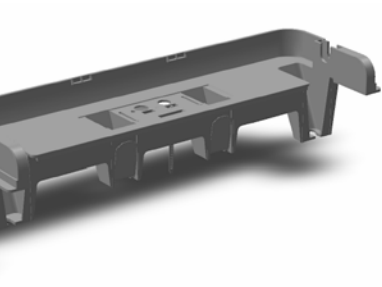

216506 - Mounting bracket
Hingeing and housing platform assembly

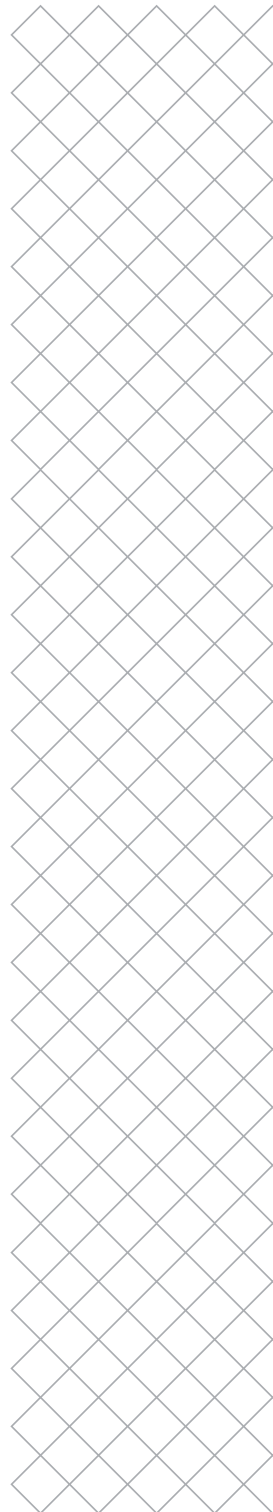



216176 - Cable clip

Cable clip




217606 - Removal tool

Removal tool




212897 - Air Manager cable


UM Bus cable L610 Straight/Straight

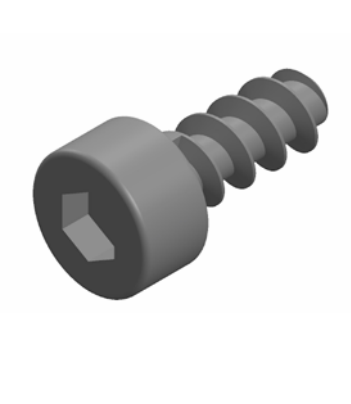

2152 - Thread-forming screw M2.5x6

Hex Socket Head Remform Screw 2.5 x 6

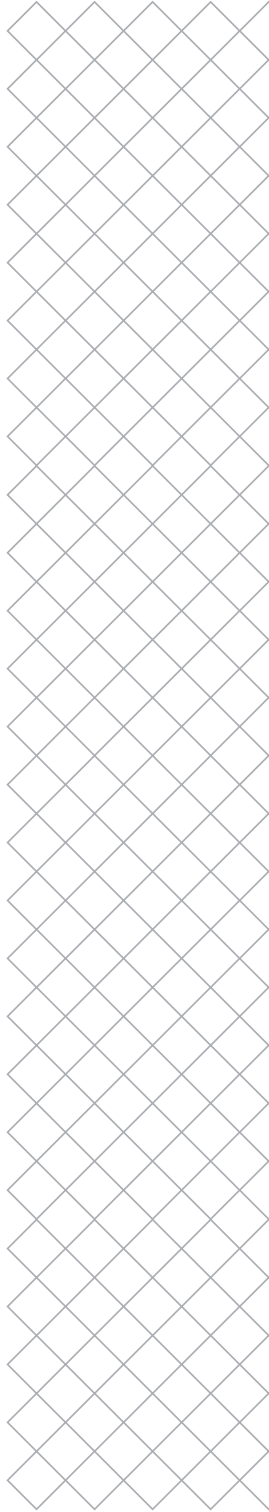

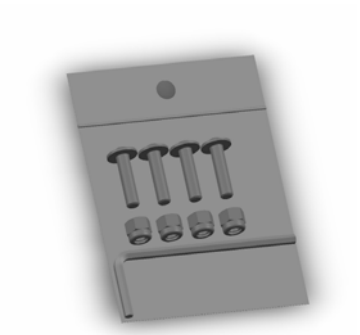


216958 - External ventilation bolts pack

Bag screws and key



1402 - Hex key 2.5


Hex key wrench 2.5

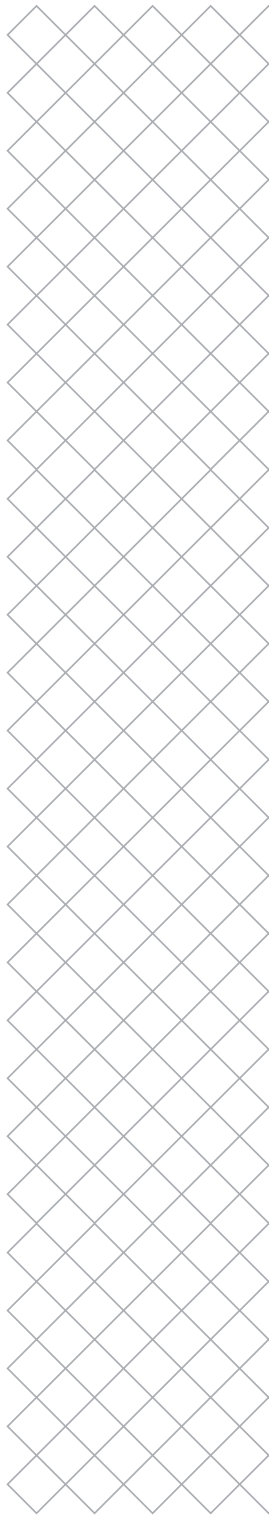

Packaging

219588 - Packaging Air Manager

Box assembly air manager

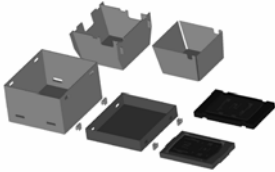


217896 - Box Air Manager

Top box S5





2066676 - Packaging bottom tray

S5Pkg Bottom Tray

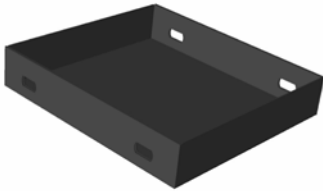

206688 - Locking clip

S5Pkg Box locking clip

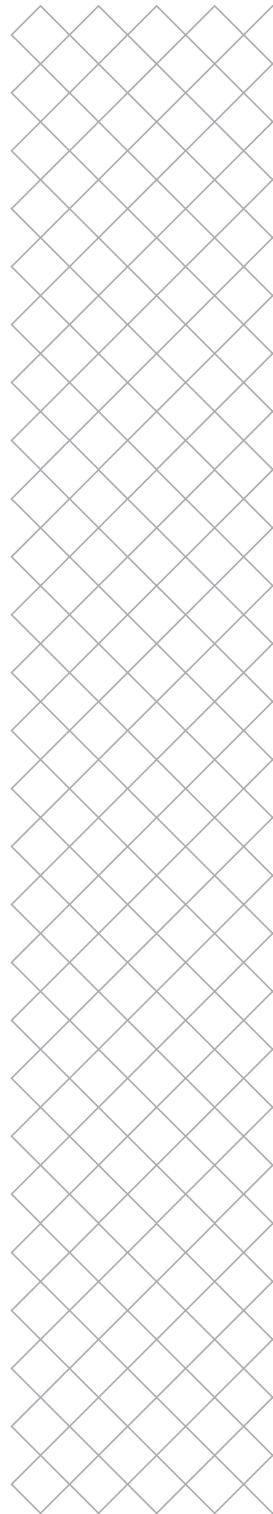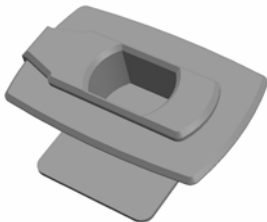

Packaging



217924 - Quick start guide Air Manager
Quick start guide Air Manager



217925 - Safety booklet Air Manager
Safety book air manager

